

Replacing the Cylinder on an LT2081 Leverset

Removing Cylinder

1. Insert key in lockset.



2. Turn key ¼ turn clockwise.



3. Note key is now 90 degrees to button release hole.



4. Depress button release and remove lever.



5. Note: button must be depressed and lever pulled simultaneously. The lever will come off if the key is oriented as described above.

6. Press in on cylinder to eject plastic insert. Remove key and cylinder



Replacing Cylinder

1. Orient cylinder tailpiece parallel to tab.



2. Insert cylinder in lever, maintaining tailpiece orientation.



3. Replace plastic tab.



4. While holding the plastic tab in position, slide the lever onto the shaft with the button release hole oriented as shown.



5. Squeeze lever onto shaft.



6. Turn key clockwise until you hear a click.



7. Squeeze the lever further onto the shaft until you hear another click.

