

Installation Instructions Non-fire Rated Less Bottom Rod(LBR) Device

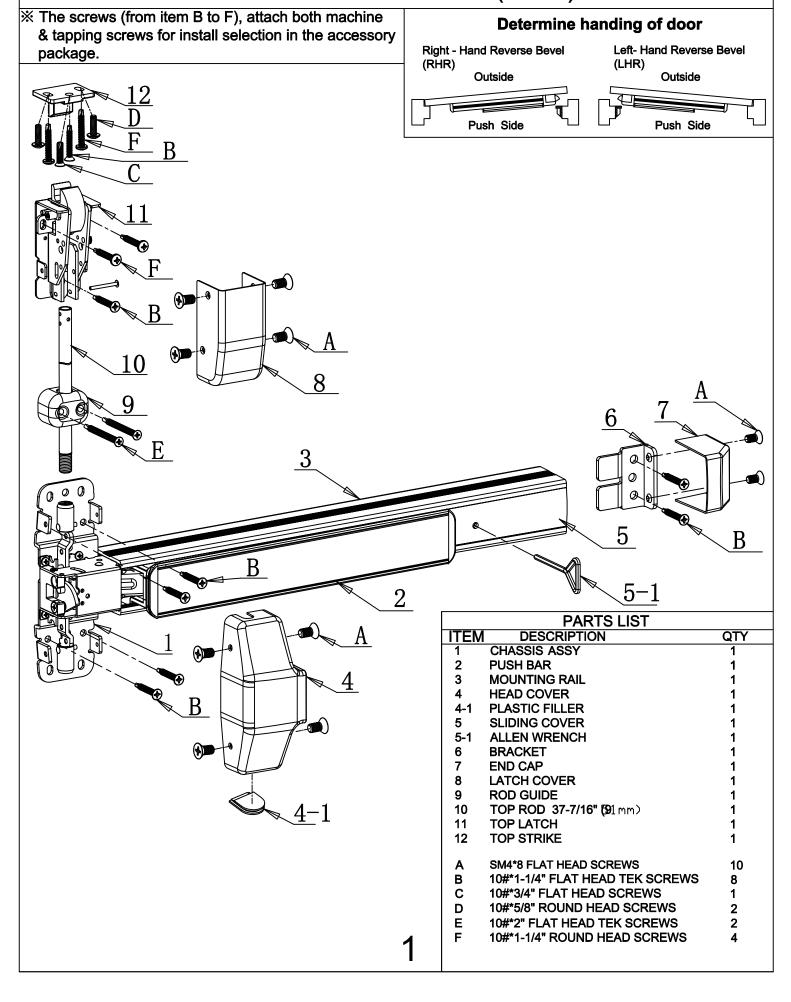

Installation Instructions Fire Rated Less Bottom Rod(LBR) Device

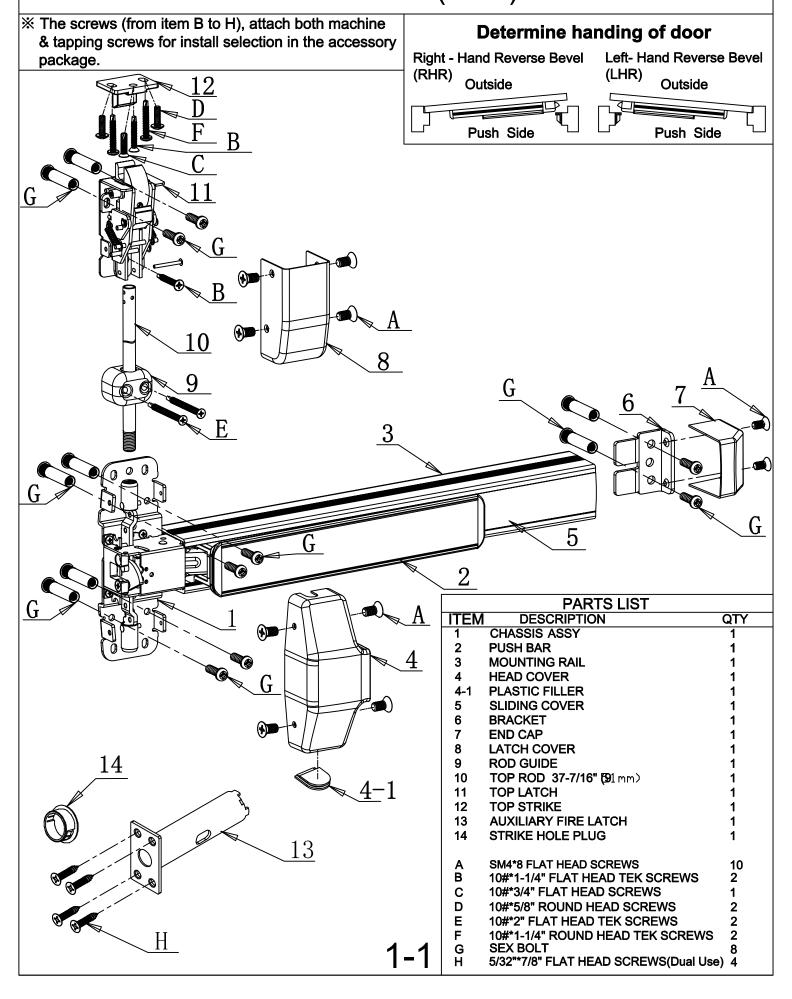


Less Bottom Rod (LBR) Devices STEP 1 MARK CETNER LINES


Mark Center Lines on INSIDE of door .Establish the horizontal center line of the device by drawing a line across the door 41" (1041mm) above floor line . Establish the top backset center line by drawing a vertical line from the top to bottom of the door measuring from the LOW SIDE of the DOOR BEVEL. After marking & drilling, please install pushbar according to its marked location. With establishment of pushbar, then go for next step of other installations.

Regularly furnished unless ordered separately.

INSIDE OF LHR DOOR IS ILLUSTRATED

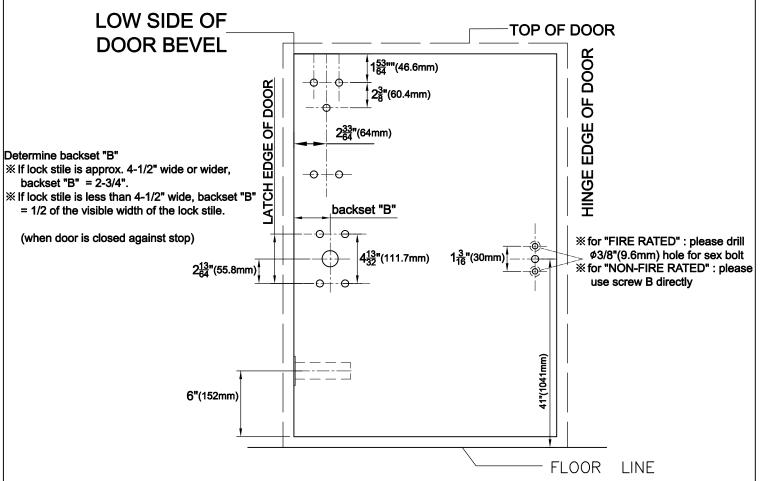

INSTALL AUXILIARY FIRE LATCH FOR Less Bottom Rod (LBR) Devices ONLY STEP 2 INSTALL AUXILIARY FIRE LATCH(Only for Fire Rated)

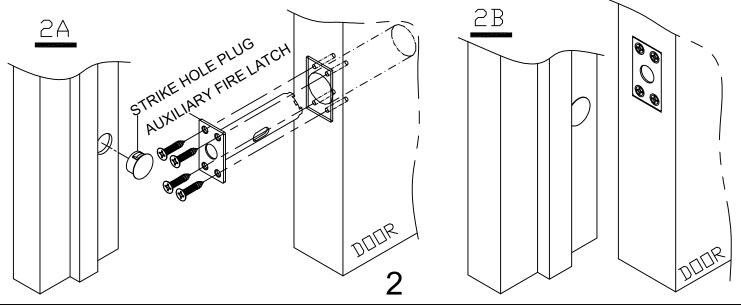


Less Bottom Rod (LBR) Devices

STEP 3 INSTALL TOP LATCH


Follow TEMPLATE to install top latch with two screws (F).

(Do not tighten the screws (F) firmly)

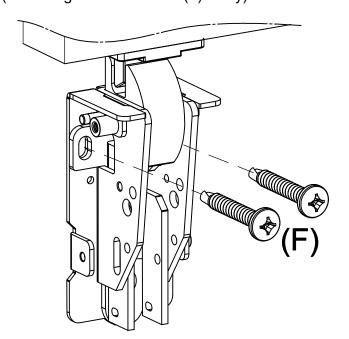

STEP 4 INSTALL TOP STRIKE

Follow TEMPLATE to install top strike. Adjust the proper gap between top latch and strike which is about 5/64" (2.0mm), tighten screws (F) firmly and then screw (B).

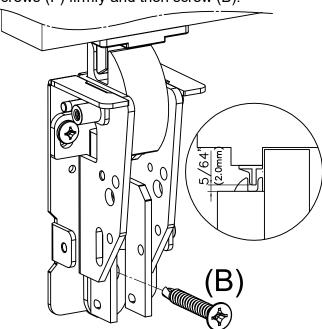



Less Bottom Rod (LBR) Devices STEP 5 INSTALL & ADJUST TOP ROD

The rod length can be adjusted by the thead of the rod, adjust the correct length when door is in the closed position, by aiming the rod to the hole of the part (P).

* If top rod had been cut to fit door height, please drill hole for pin loading.




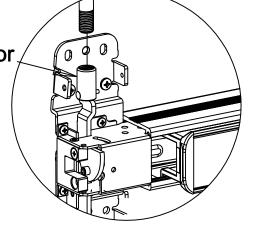

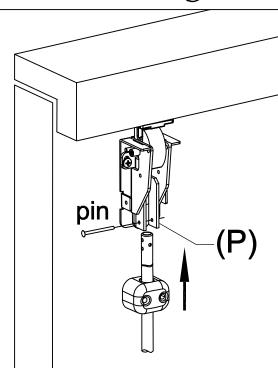

STEP 6 INSTALL LACTH COVER, HEAD COVER & ROD GUIDE

(1). Install latch covers ,head cover and fix/tighten them with screws (A).

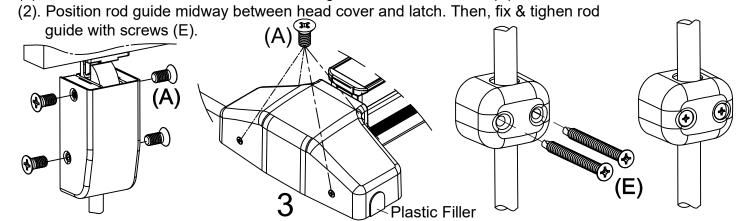

Less Bottom Rod (LBR) Devices


STEP 7 TEST PUSH RAIL & THE DOGGING FUNCTION

- 1. The latches should engage the strikes when the door is closed. If the door can be pushed open without depressing the push bar, please check the rod length and installation (see step 3)
- 2. The latches should disengage from the strikes freely when the push bar is depressed or dogged down. If not, please check the rod length/installation again (see step 3)
- 3. When applying outside trims:
- (1). No trims: Exit only, latch bolts are retracted just by the push bar inside.
- (2). Entry: latch bolts are retracted by trim outside after the trim is unlocked.
- (3). Storeroom: latch bolts are retracted by trim outside with key only.
- (4). Passage: latch bolts are retracted by trim always open.
- 4.Dogging:Use allen wrench and turn clockwise 90° when depressing push bar. Latch bolts will remain retracted.


STEP 8 CHANGE HANDING OF DEVICE


TO CHANGE HANDING OF DEVICE

(FOR EXAMPLE: FROM LHR to RHR)

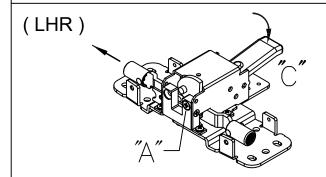


PRESS LIFT ARM "C" AND ENSURE THE DIRECTION. The screw "A" is at the below hole position as figure shown

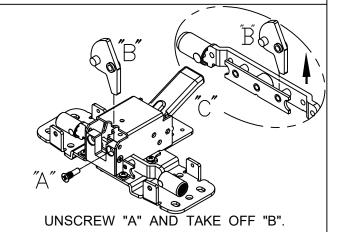

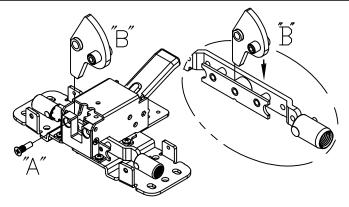


TURN "B" 180° AND PUT IT BACK AS FIGURE SHOWN THEN, FASTEN "A" AT ABOVE SCREW HOLE.

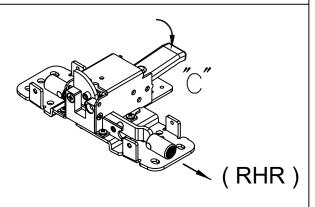

OPERATE LIFT ARM "C" TO ENSURE THE PROCESSING DIRECTION IS REVERSED.

TEMPLATE FOR SVR DEVICE

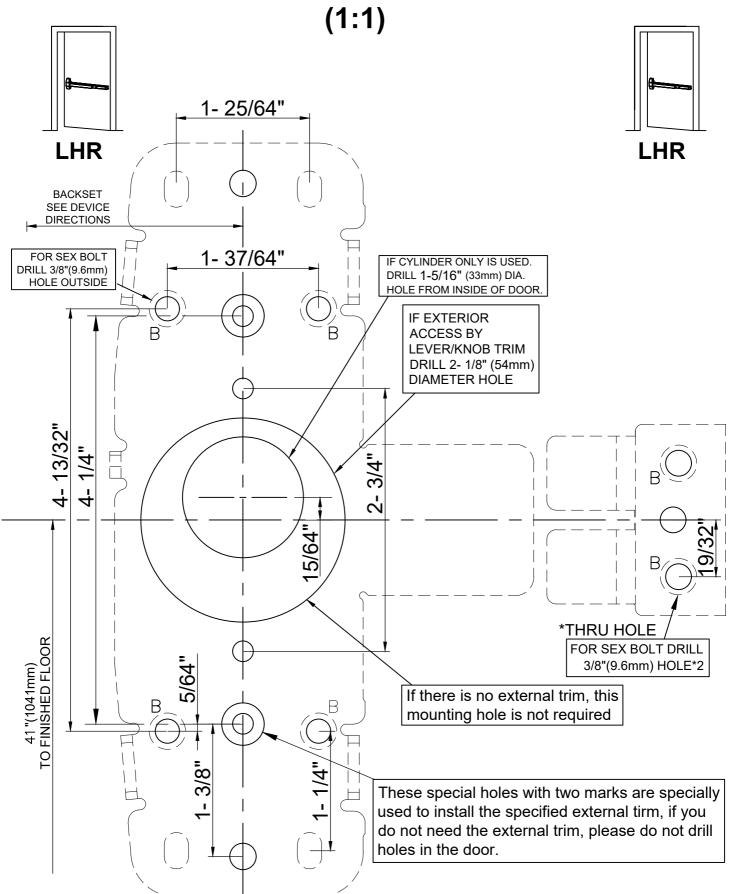

TEMPLATE FOR SVR DEVICE (1:1)1-25/64" **RHR RHR BACKSET** SEE DEVICE **DIRECTIONS** 1-37/64" FOR SEX BOLT IF CYLINDER ONLY IS USED. DRILL 3/8"(9.6mm) DRILL 1-5/16" (33mm) DIA. HOLE OUTSIDE HOLE FROM INSIDE OF DOOR. IF EXTERIOR **ACCESS BY** LEVER/KNOB TRIM DRILL 2- 1/8" (54mm) DIAMETER HOLE 15/64" *THRU HOLE 41"(1041mm) TO FINISHED FLOOR FOR SEX BOLT DRILL 3/8"(9.6mm) HOLE*2 If there is no external trim, this В mounting hole is not required These special holes with two marks are specially used to install the specified external tirm, if you do not need the external trim, please do not drill holes in the door.

