



RHR

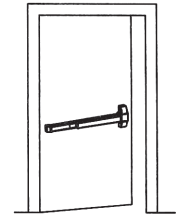


RHR




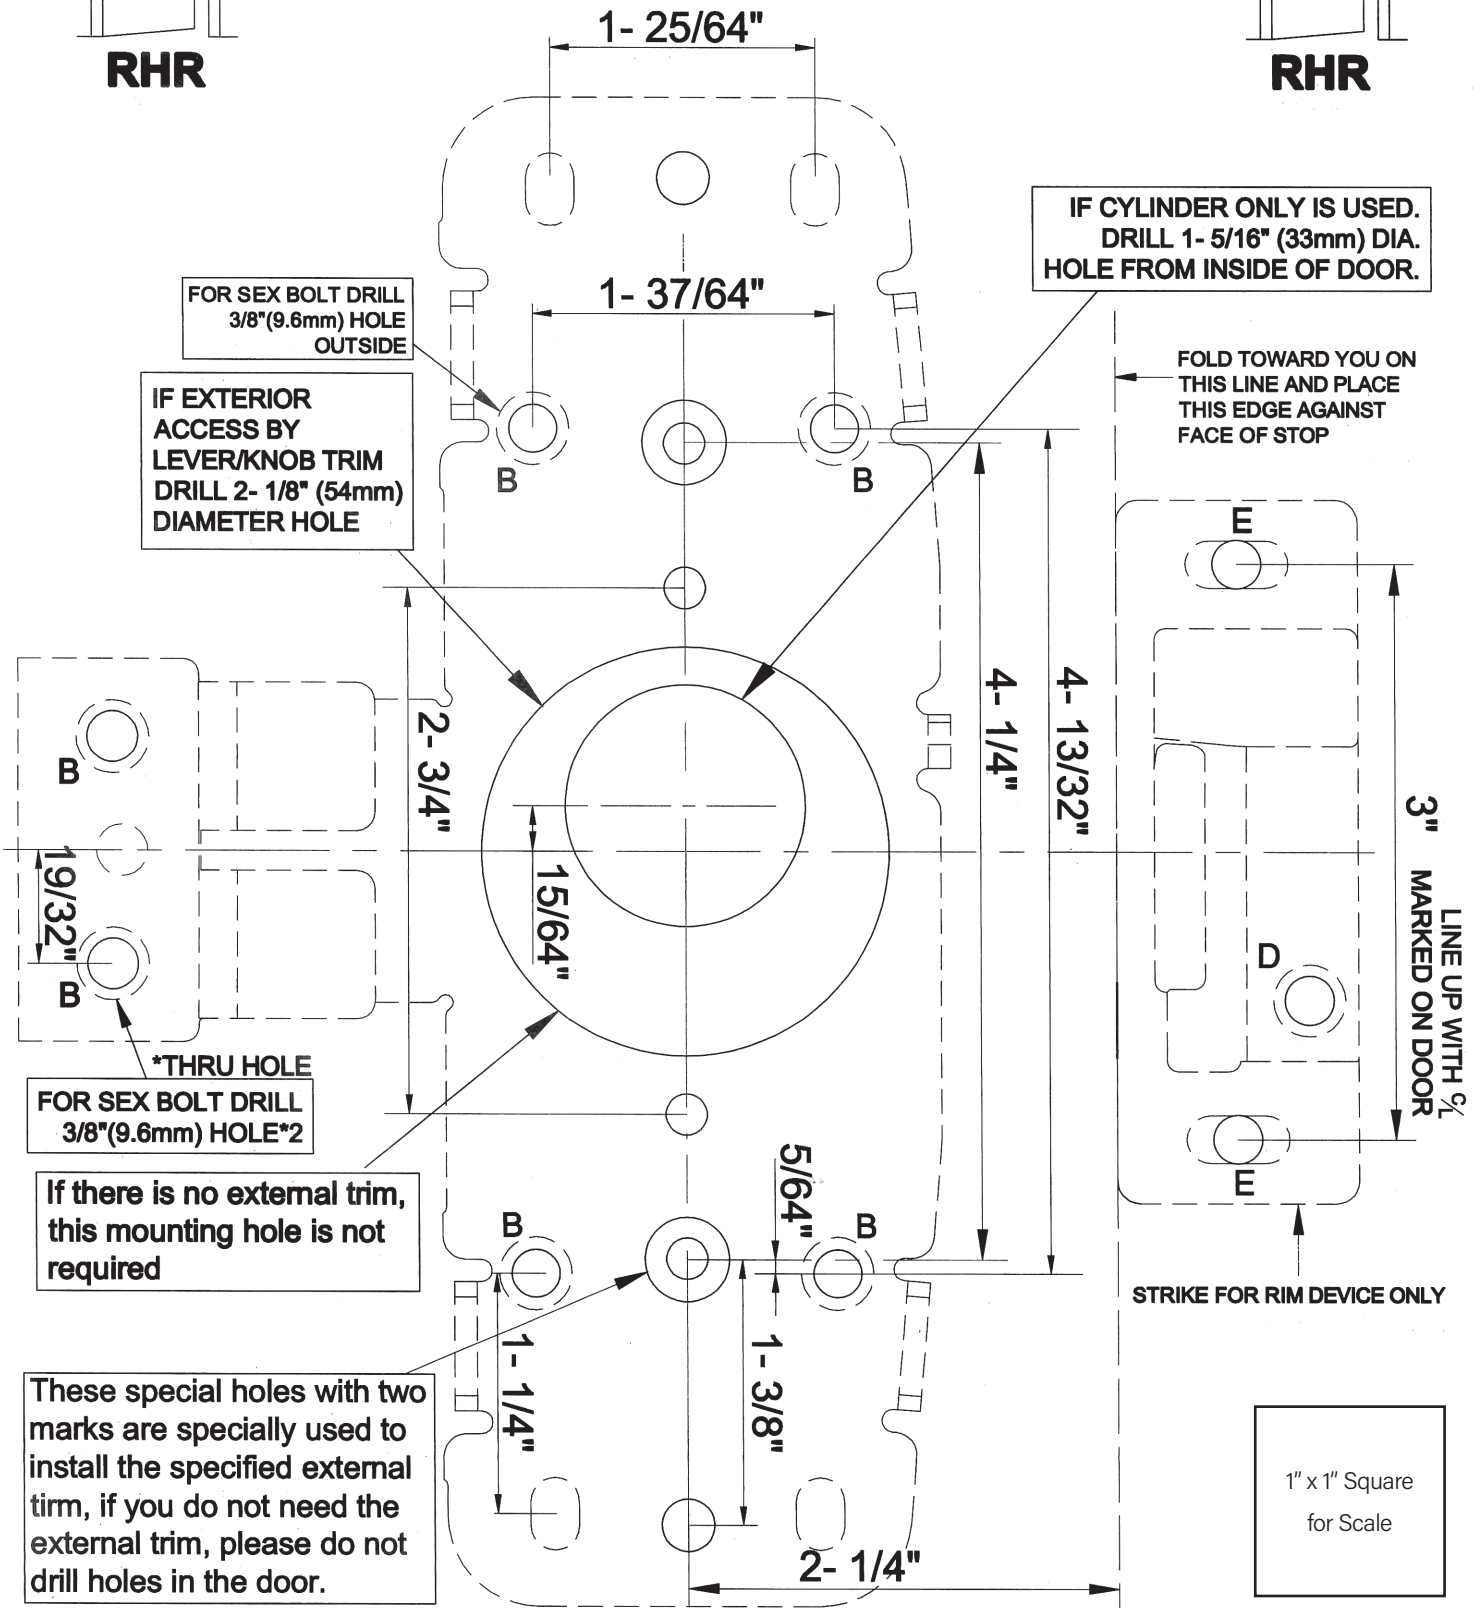

**READ AND FOLLOW
INSTRUCTIONS CAREFULLY.**
Incorrect installation or adjustment
could cause damage or injury.

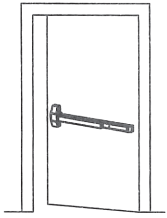

LHR

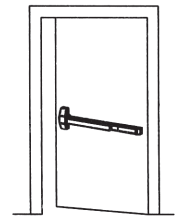


LHR

IF CYLINDER ONLY IS USED.
DRILL 1- 5/16" (33mm) DIA.
HOLE FROM INSIDE OF DOOR.

FOLD TOWARD YOU ON
THIS LINE AND PLACE
THIS EDGE AGAINST
FACE OF STOP

LINE UP WITH 3/4"
MARKED ON DOOR

STRIKE FOR RIM DEVICE ONLY

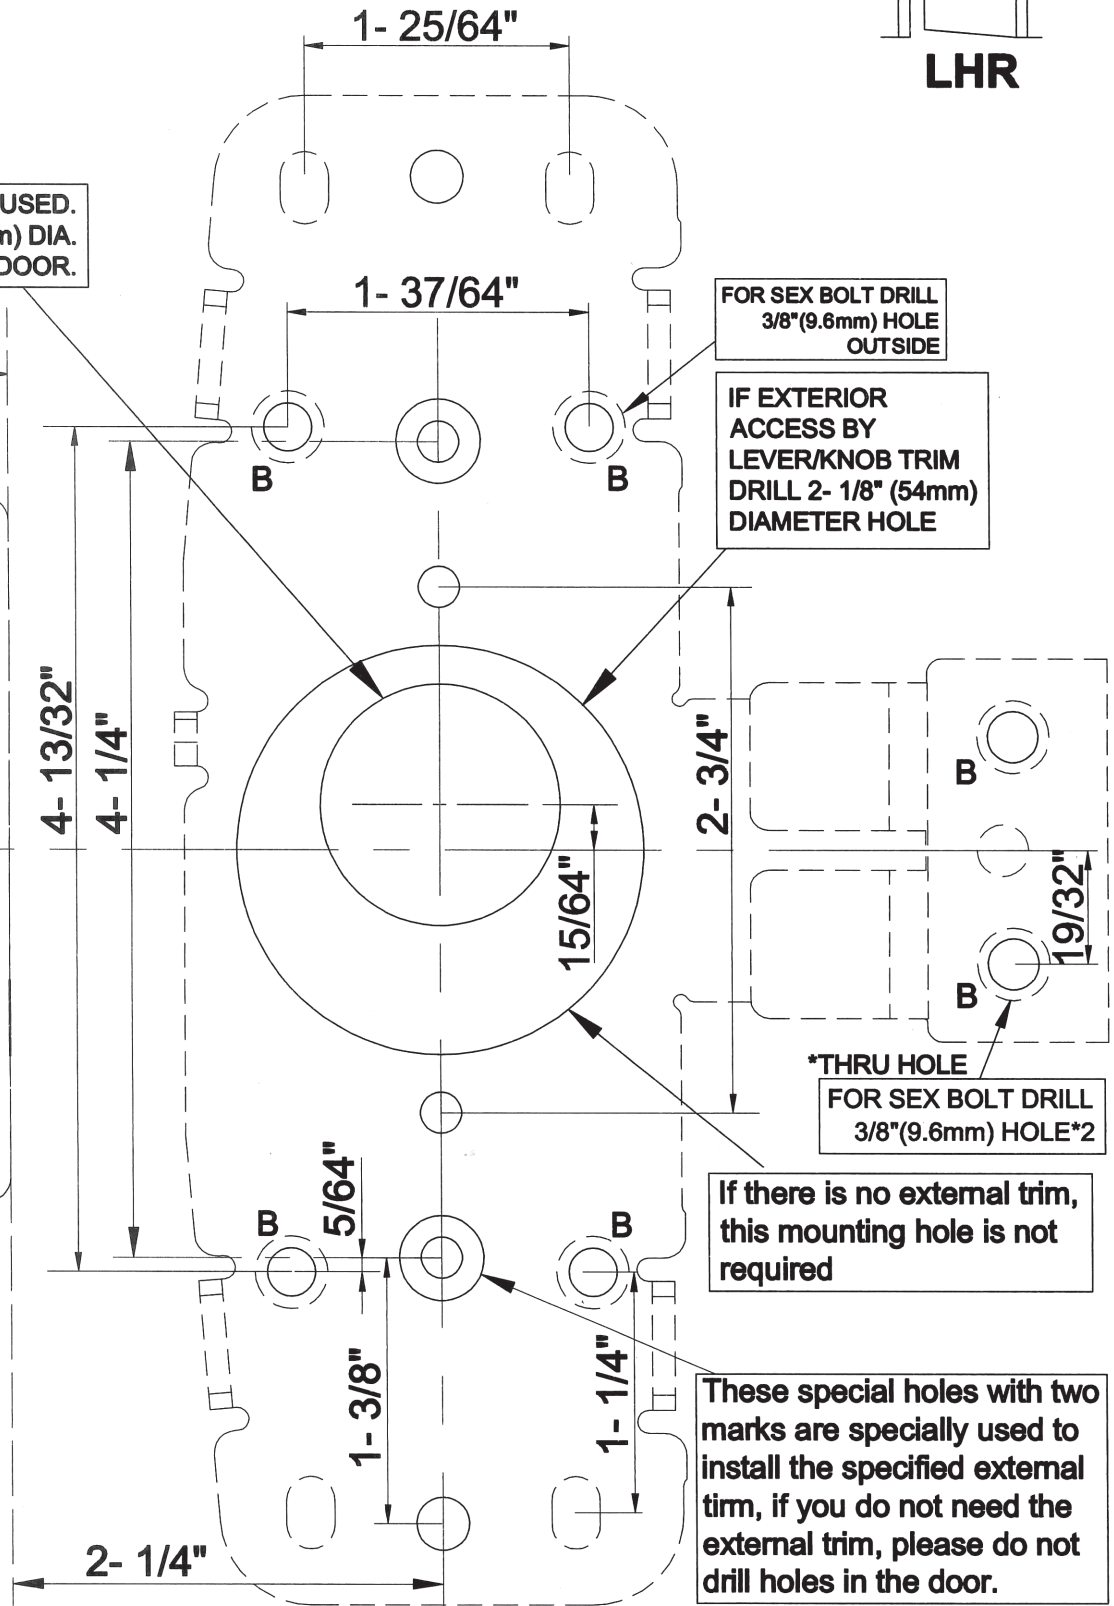

FOR SEX BOLT DRILL
3/8" (9.6mm) HOLE
OUTSIDE

IF EXTERIOR
ACCESS BY
LEVER/KNOB TRIM
DRILL 2- 1/8" (54mm)
DIAMETER HOLE

*THRU HOLE
FOR SEX BOLT DRILL
3/8" (9.6mm) HOLE*2

If there is no external trim,
this mounting hole is not
required

These special holes with two
marks are specially used to
install the specified external
trim, if you do not need the
external trim, please do not
drill holes in the door.