


TEMPLATE for 8P03 Lever Trim 8300 & 8400 Exit Device

FOR WOOD DOORS:
DRILL (4) $3/32$ " DIA. X $1-1/4$ "
DEEP PILOT HOLES
FOR METAL DOORS:
TAPPED (4) # $3/16$ " HOLES.

FOR THRU-BOLTING:
DRILL (2) $3/8$ " DIA. HOLES
THRU DOOR

FOR LEFT
HAND

FOR RIGHT
HAND

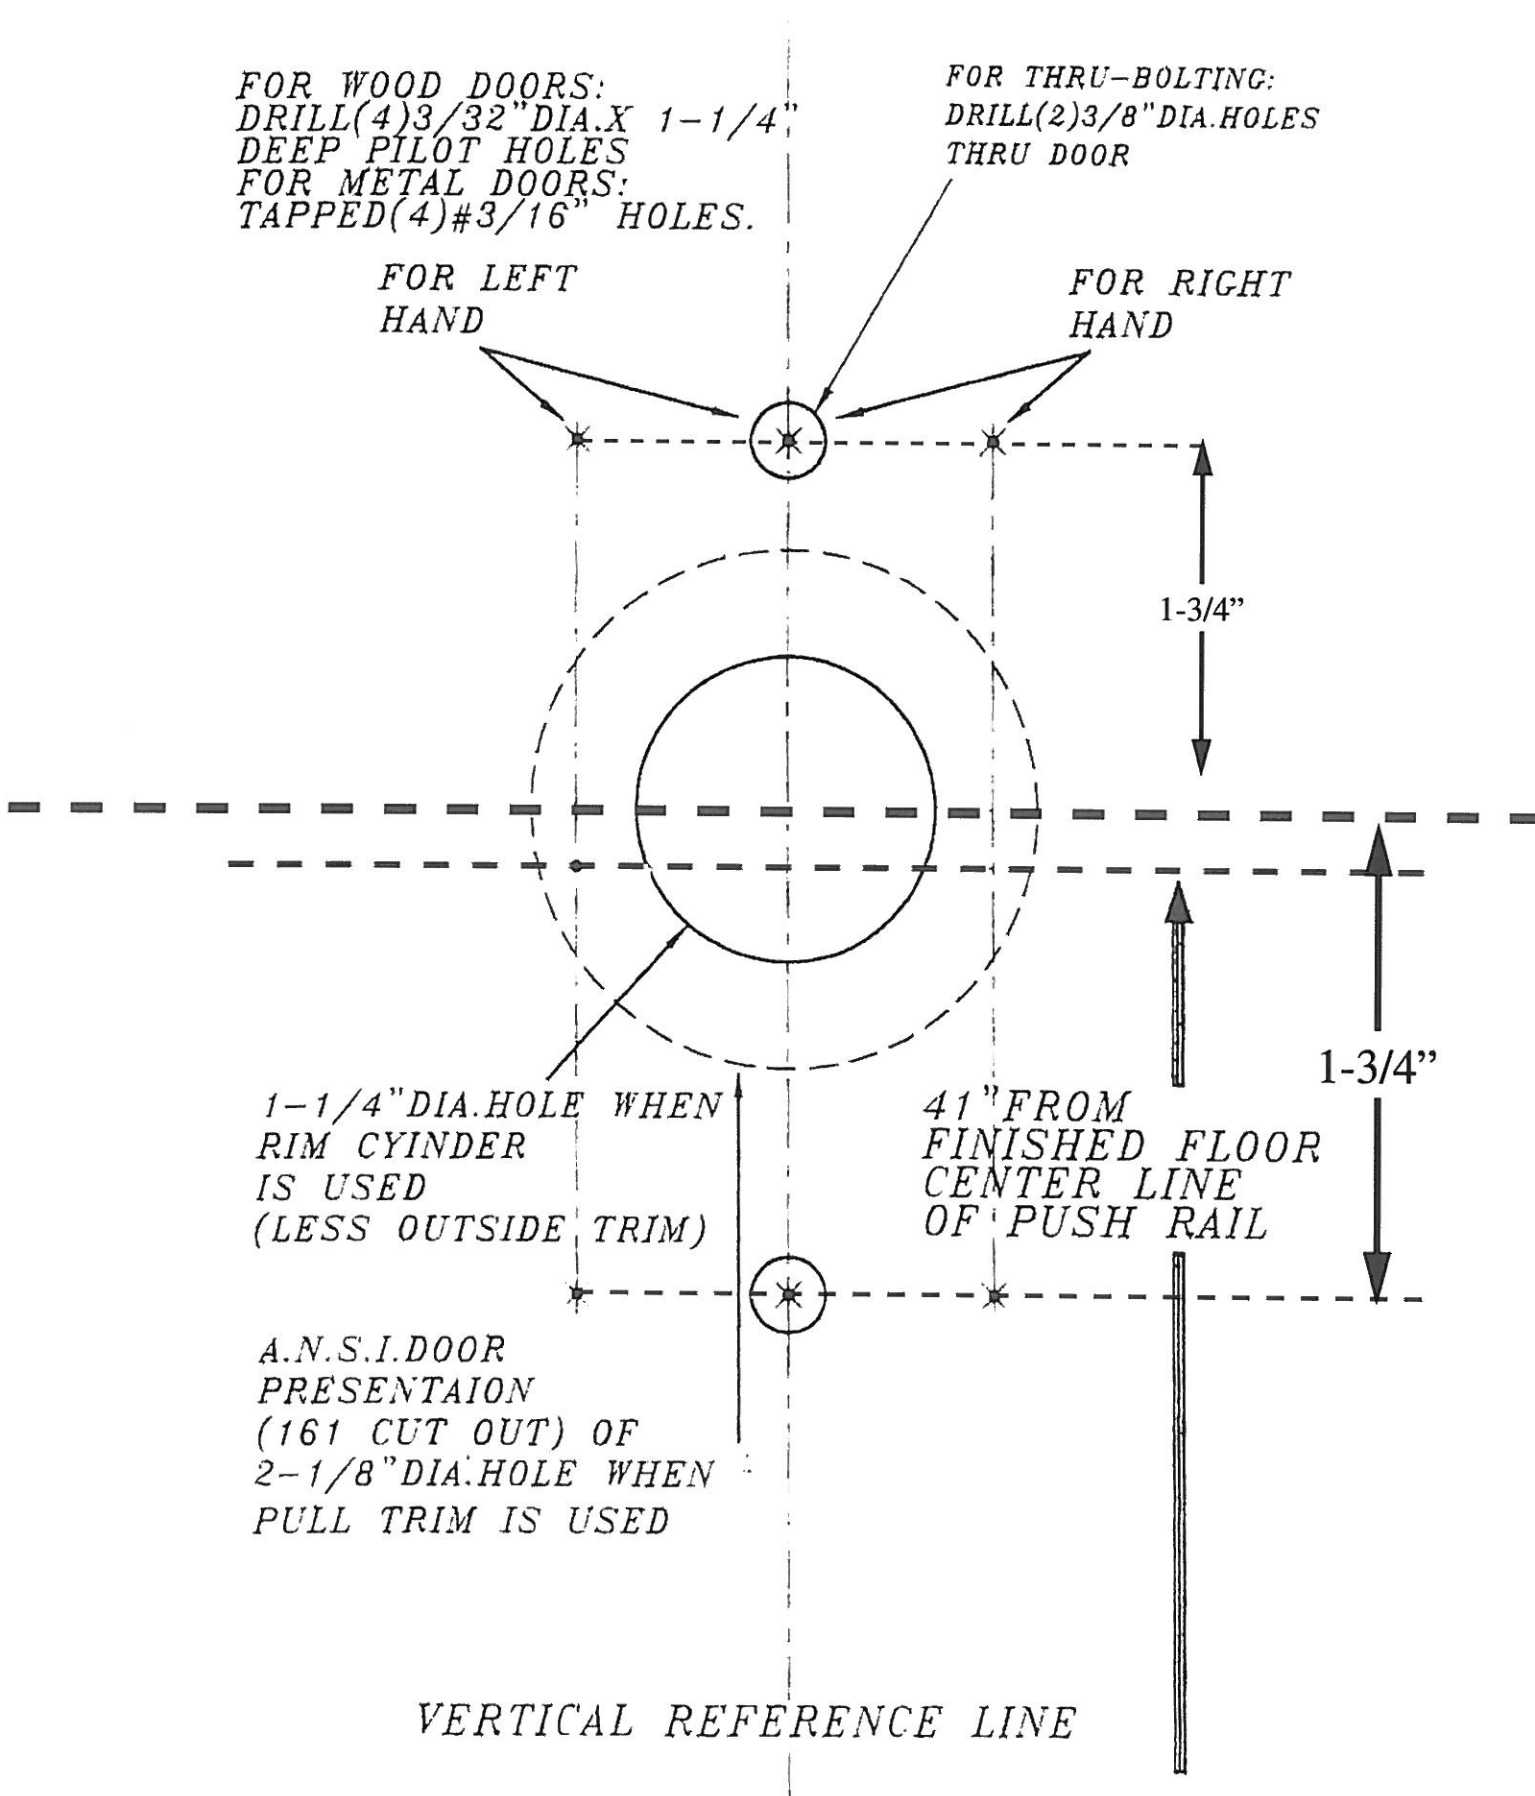

$1-1/4$ " DIA. HOLE WHEN
RIM CYLINDER
IS USED
(LESS OUTSIDE TRIM)

41" FROM
FINISHED FLOOR
CENTER LINE
OF PUSH RAIL

A.N.S.I. DOOR
PRESENTATION
(161 CUT OUT) OF
 $2-1/8$ " DIA. HOLE WHEN
PULL TRIM IS USED

VERTICAL REFERENCE LINE

① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET