


TEMPLATE for EMP808 & CTL LEVER TRIM FOR 8300 EXIT DEVICE

Page 1 of 1

FOR WOOD DOORS:
DRILL (4) $3/32$ " DIA. X $1-1/4$ "
DEEP PILOT HOLES
FOR METAL DOORS:
TAPPED (4) $\#3/16$ " HOLES.

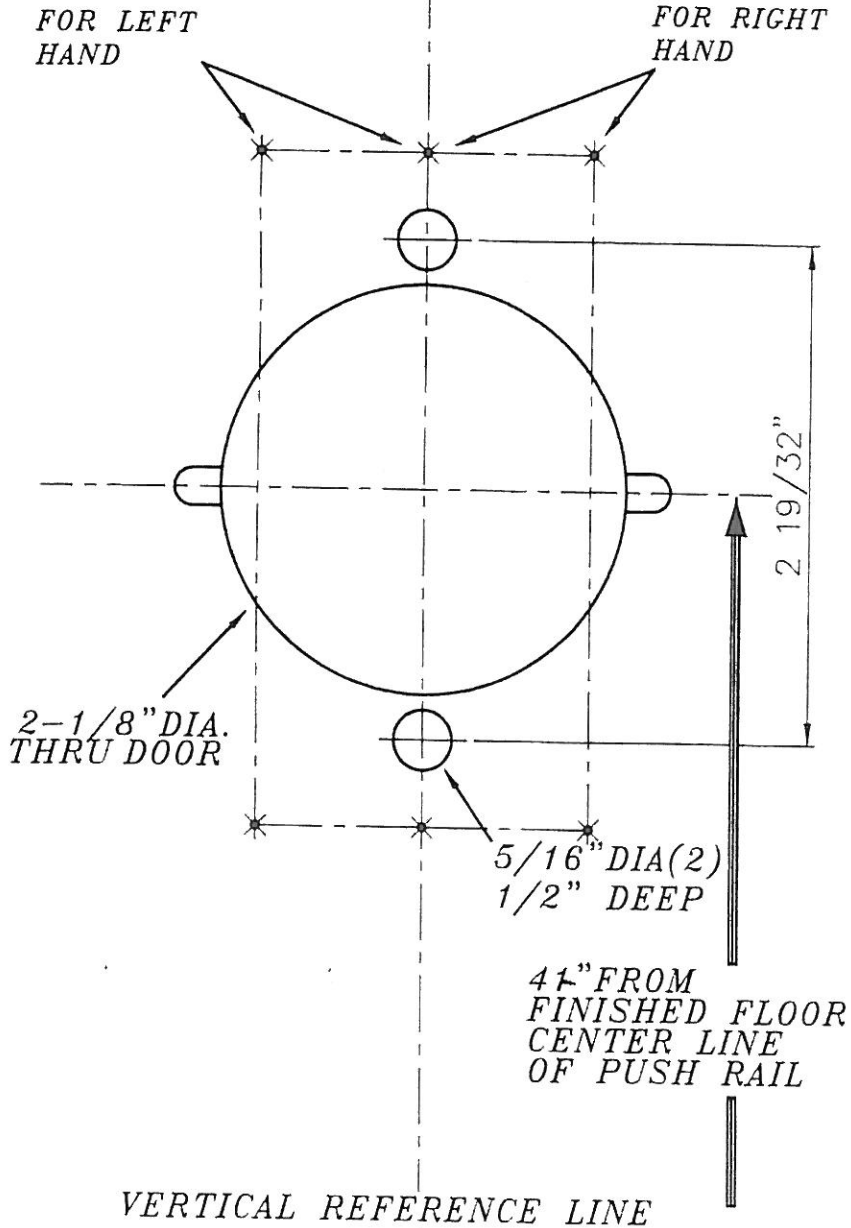

① FOR REFERENCE LINES REFER TO INSTRUCTION SHEET