
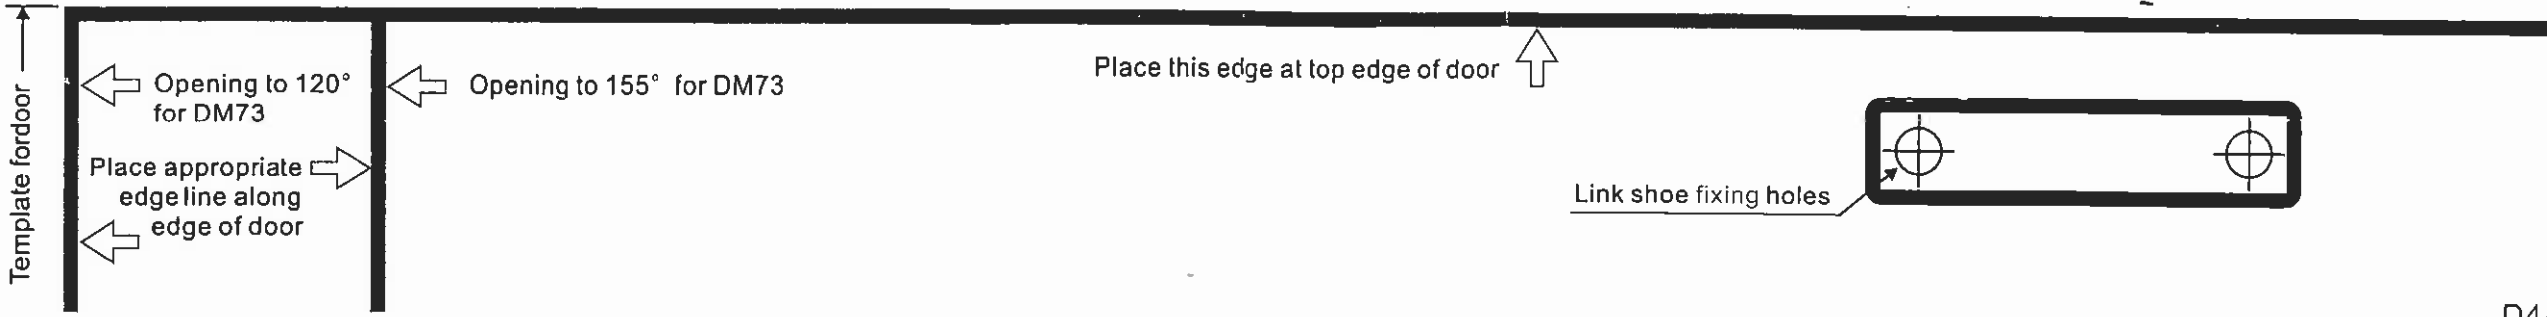
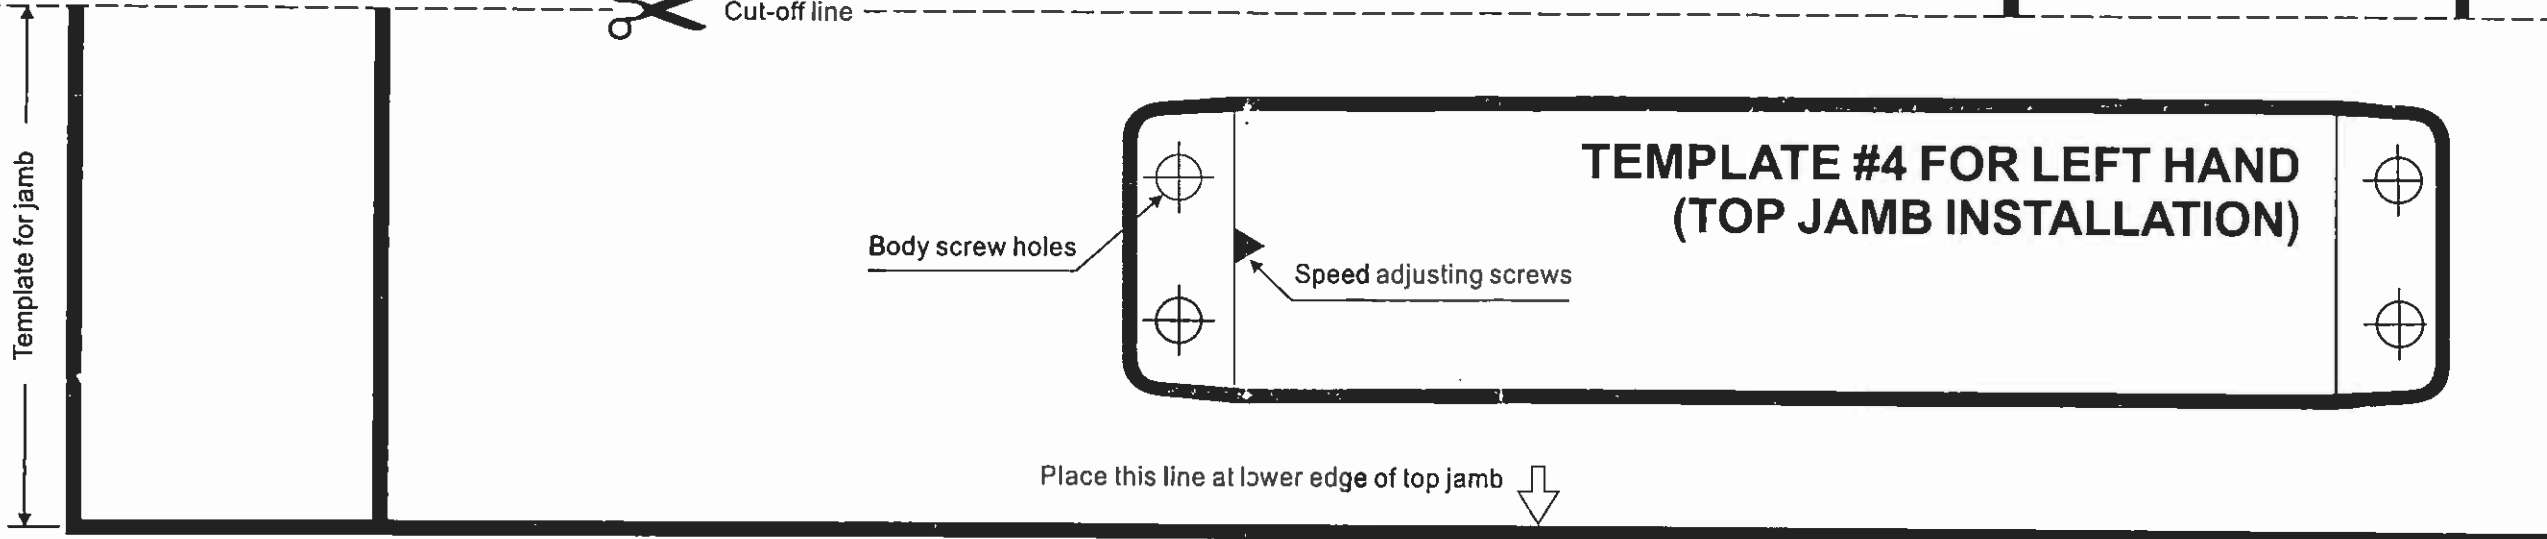
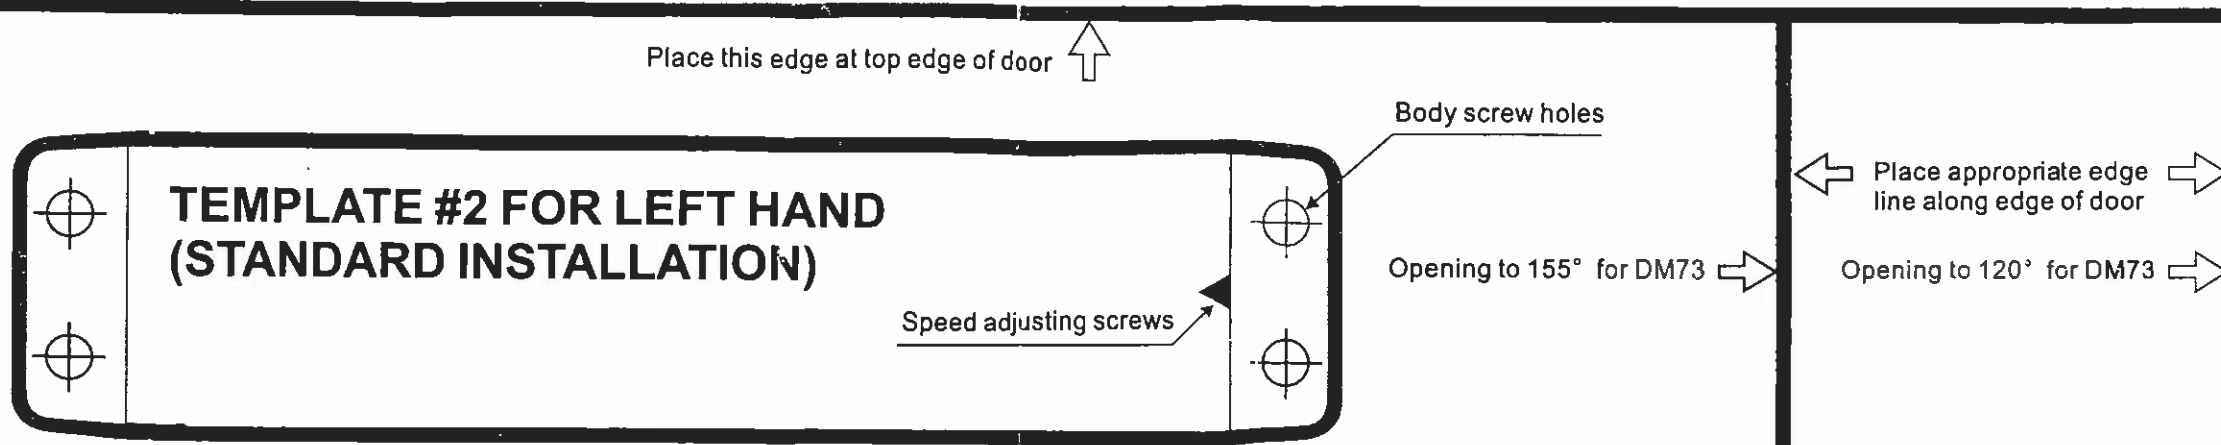


TEMPLATE FOR LEFT HAND DOOR

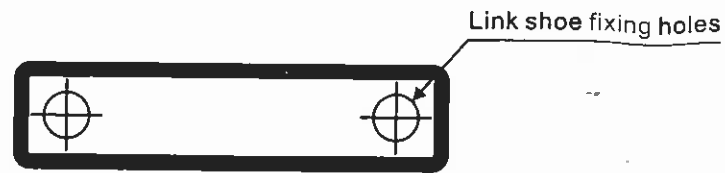

TEMPLATE FOR RIGHT HAND DOOR

D4-1

Link shoe fixing holes



↑ Place this edge at top edge of door

Body screw holes


**TEMPLATE #1 FOR RIGHT HAND
(STANDARD INSTALLATION)**

Speed adjusting screws

← Place appropriate edge line along edge of door →

← Opening to 120° for DM73

← Opening to 155° for DM73

Cut-off line 

**TEMPLATE #3 FOR RIGHT HAND
(TOP JAMB INSTALLATION)**

Speed adjusting screws

Body screw holes

↓ Place this line at lower edge of top jamb

Template for jamb

↑ Place this edge at top edge of door

Opening to 155° for DM73 →

Opening to 120° for DM73 →

← Place appropriate edge line along edge of door →

Template for door



Link shoe fixing holes

D4-1