


**TEMPLATE FOR  
INSTALLING**

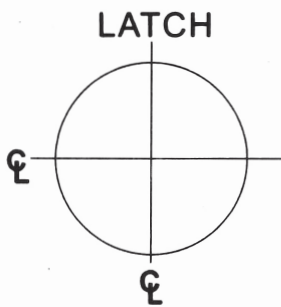

MARK  
CENTER OF  
DOOR THICKNESS  
FOR 1" DIA HOLE

DETACH HERE

HIGH  
BEVEL

LOW  
BEVEL

MARK CENTER  
FOR 3/8" HOLES

NOTE:  
Do not drill these holes for  
non thru bolt installation.

MARK CENTER  
FOR 2 1/8" HOLE

Notch for metal  
door only

2 3/4" BACKSET

2 3/8" BACKSET


2 3/4"

LATCH

5/32"

- IMPORTANT
1. FOR HIGHSIDE OF BEVEL PLACE  
OUTSIDE LINE AT EDGE OF DOOR
  2. FOR FLAT DOORS PLACE CENTER  
LINE AT EDGE OF DOOR
  3. FOR LOWSIDE OF BEVEL PLACE  
INSIDE LINE AT EDGE OF DOOR

5/32"



DH45

HIGH  
BEVEL

LOW  
BEVEL